

Model : All Sharp

- 01 - From front screen type *01763*6371#
- 02 - The handset will reset back to the main screen
- 03 - Press M button.
- 04 - Scroll to Settings and press SELECT.
- 05 - Scroll to Security and press SELECT.
- 06 - Scroll to MEP locks and press SELECT.
- 07 - Enter your Handset Code (the default code is 0000) and press OK.
- 08 - Scroll to Network and press SELECT.
- 09 - Scroll to Deactivate and press SELECT.
- 10 - Enter Unlock Code we send to you and press OK.
- 11 - Handset should then display DONE and be unlocked.